

GD576 new home use top seller big floating pod

Introduction:

Floatation isolation tank float Float-Room Sessions Tank

Floatation, also known as floating, is a practice where you float effortlessly in a special pod of Epsom Salt water. Without the constant noise of analysing the world around you, your body lowers its levels of cortisol (which is the main chemical component of stress). Your brain releases elevated levels of dopamine and endorphins.

Your muscles, joints, and bones take a well-deserved break. Your mind becomes still and your body suddenly has loads of extra resources, which allows it to focus on things like healing and resting – the stress simply floats away. The spine lengthens an inch, chronic pain is relieved, and your muscles are allowed to fully recover. Unlike lying on a mattress, lying in water allows blood to flow freely all throughout your body.

About 40 minutes into your float at The Float Spa in Hove, your brain stops producing its normal Alpha waves and starts churning out Theta waves. The [Theta state](#) is typically associated with advanced meditative techniques and provides an immense clarity of thought and an experience of the pure essence of being. Floatation is a tool that makes this state easily accessible to anyone.

Even the magnesium-based Epsom Salts, we use at The Float Spa in Hove are good for you. They soften and replenish your skin, and help counteract the magnesium deficiency that most of us have due to depleted magnesium levels in our soil and food.

Floating benefits

- eliminate tension, improve sleep, efficient rest

Space floating can produce self-hypnotic effect to improve the enthusiasm to improve sleep; reduce mental stress, physical and mental get an excellent rest. Promote mental relaxation, eliminate stress, anxiety, depression, fear and time difference fatigue, eliminate mental and physical stress; the body to play a fast charge and the role of additional energy.

-
- muscle relaxation, improve memory, energetic

Space floating on the role of human health Experts pointed out that 30 minutes of space floating sleep is more than 4 hours of normal sleep, it can stimulate the left and right brain synchronization coordination, improve brain waves; people thinking clear, thought sensitive and flexible; Creativity, improve the ability to observe; slow down the ideological and physical sense of tension, make people full of spirit, energetic, people into the "nothingness" state, can receive acupuncture and yoga the same relaxation effect.

- conditioning joints, prevent pain, lower blood pressure

Space floating floating state so that the muscles do not have to fight against gravity, weight also will disappear with the muscles, joints, cervical and other fast into the complete relaxation, get the depth of relaxation, and the body's blood supply status to be readjusted, Improve blood circulation; for the treatment of neurasthenia, mental stress spasms, hypertension, rheumatism, arthritis and other significant adjuvant treatment effect, to eliminate the body pain has a good effect.

- enhance physical fitness, conditioning pulse, reduce trauma

Space floating can improve the physical state of exercise, reduce the secretion of cortisol, lactic acid and produce increased secretion of brain endocrine, reduce motor trauma, accelerate the recovery of trauma, conditioning pulse, heart rate and oxygen consumption.


Applicable scene

Features

- 1, The power supply voltage a. c. 220V / 110V ; 50Hz-60hz
- 2, The total power is 6000W
- 3, Disinfection pod by ozone O₃
- 4, The temperature ranges from room temperature ~ 70 °C
- 5, Time : 0 to 90 minutes
- 6, Automatic water recycling
- 7, Floating hydraulic massage
- 8, Constant temperature
- 9, Bluetooth music
- 10, UV light disinfecting water all the time

GD-pod Technical Specifications i-sopod front

- 1 switch button for bluetooth music
- 2 switch button for interior light
- 3 12V DC led lights
- 4 filtration water outlet
- 5 ozone disinfection
- 6 12V DC led lamp
- 7 Gas strut.
- 8 filtration water inlet

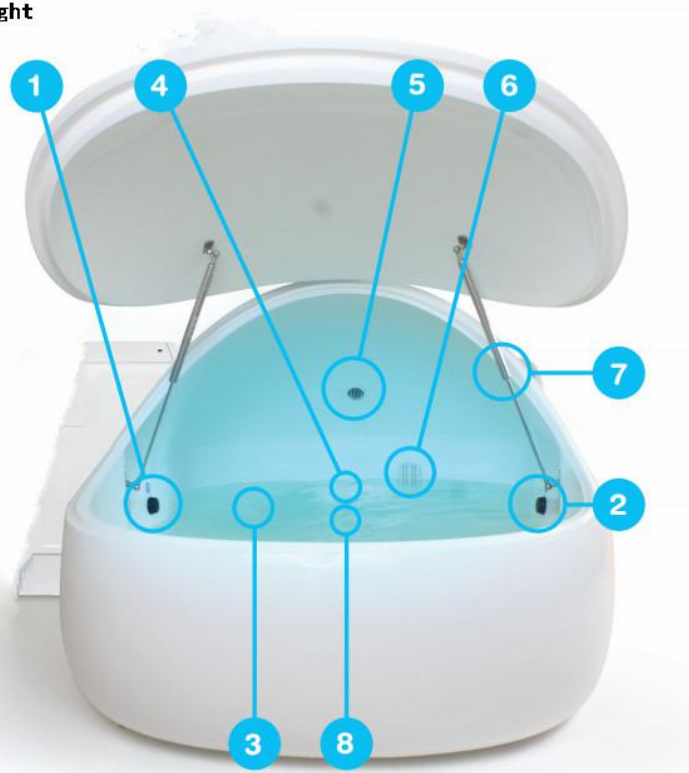

Mains Input

100 – 240VAC. 50/60Hz.

This equipment must be earthed.

The mains input supply must be externally fused at 13A.

Heater Output

Mains output for the water heater. This output is switched on when the tank is not in use and the water temperature falls below the user adjustable set point.

Note that the heater output will only be switched on if a valid water temperature is detected. The water heater connected to this output should incorporate a flow switch and over temperature protection.

Output rating 230VAC 9A

Max surge current 250A for 16.6mS

Protected by a PCB mounted 25A push to reset anti surge fuse.

Pump Output

Mains output for the water pump. This output is switched on whenever the water heater is on, the chlorine peristaltic pump is on and when filtration of the tank water is required.

This output will remain on for 20 seconds after the heater is switched off.

Output rating 230VAC 3.15A

Max surge current 15A for 3 Seconds

Protected by a PCB mounted 15A push to reset anti surge fuse.


Tank dimensions

- Length = 2500mm (8.2 ft)
- Width = 1505mm (5 ft)
- Height = 1300mm (4ft 3.1/4 inch)
- Weight when filled with salt and water: 950KG

Panel control:



Pipe connection of old pod:

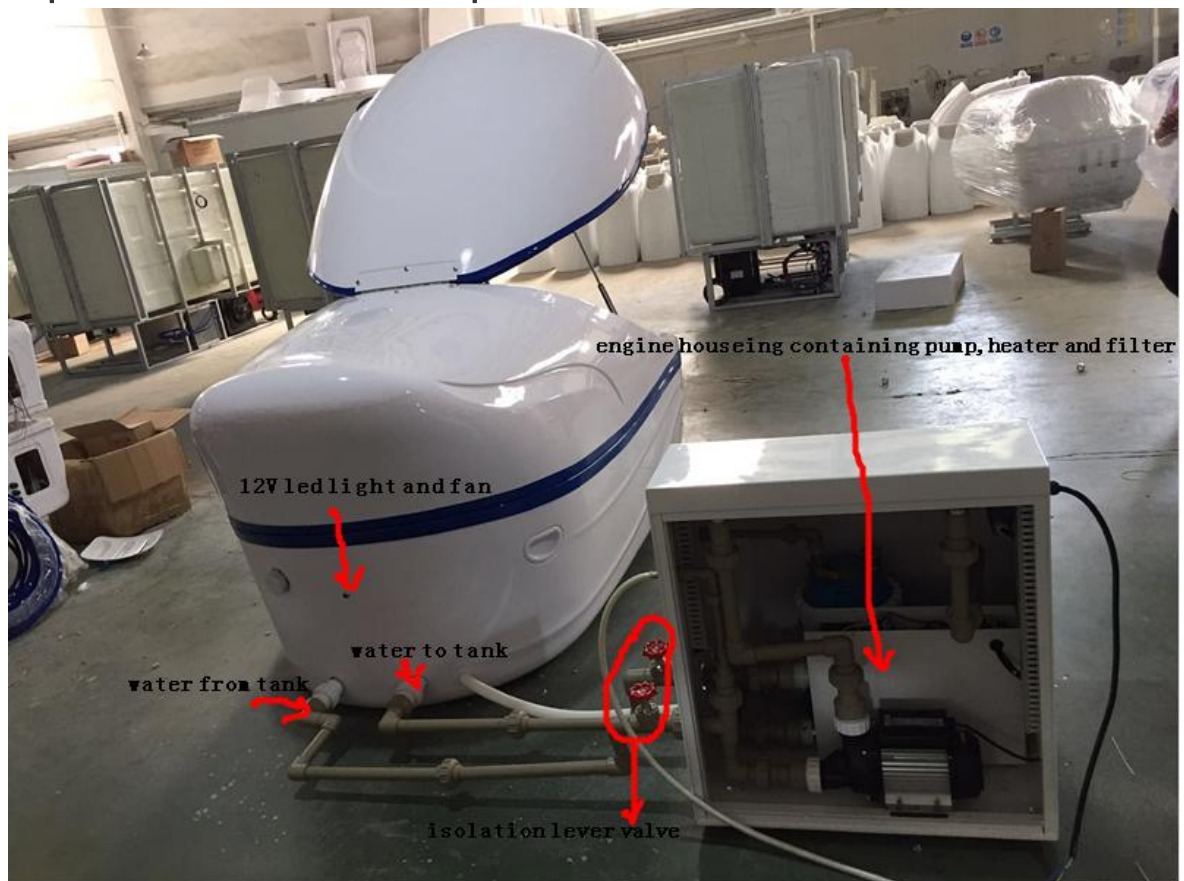

Pipe connection of new pod:



Packing size of pod 256x130x160cm,
Packing size of panel control:68x82x87cm
Packing weight:350KG

Panel:



We have two kinds of colors for GD576: blue and white





Floating process

1, floating bath process: changing clothes, bathing ---- floating ---- bathing, changing clothes

2, floating package Recuperation process: changing clothes, bathing → soothing decompression massage → space floating → bath (water shower) → health care therapy → changing clothes

■ the user to change the bath to ease the pressure after the following steps:

1, clear target - I want to decompression, the first to relax the mood is very important (the first user will have a sense of discomfort);

2, into the floating chamber steps – first head pillow set in the neck, into the cabin after the first hand with both hands clenched handrails, and then slowly squat sitting, and then slowly straight legs, with both sides of the armrest lying back , Now let go of your hands, you can enjoy floating;

3, consciousness thinking – imagine yourself back to the mother's belly fetal calm sleep;

4, into the "nothingness" state – listening to sleep decompression music, consciousness into their own "nothingness" state, forget all the troubles, so that they completely enter the "ecstasy" empty state, so that the body floating in the natural floating state of the depth Relax.....

5, out of the floating chamber steps – floating after leaving the cabin before the hand clenched handrails on both sides, and then the first hip to sit down, feet naturally to the front contraction, and then slowly stood up, stand up and step up step Leave the cabin, remove the headrest can be;

6, bathing bath finished – rinse with water, remove the body surface of the micro-mineral particles, changing clothes (according to the needs of floating nursed back to the next step can be nursed back to health).

Instruction

First, please connect all cables well between panel control, pod and tap like this:








Then open your tap and let water come through the panel control into the pod, till the pod is filled with water .

Notice: when you get the pod and install it well, before you turn on the machine, you

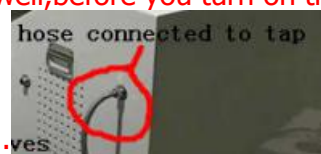

must have to connect this hole to your tap :

let water from tap come into the pod via panel control, otherwise it will burn the heater if there is no water inside the panel control which contains heater, pump. without water inside the panel control, heater will burn cause heater

cannot burn air.before you let water go through the panel control from the hole which is connected to the tap,there is only air inside the pump and heater,so you cannot turn on the heater ,otherwise heater will be burned ,this is commen sence!

After pod is filled with water,then add espom salt at least 360KG inside the water.the better floating, the more salt you add!

Third :after the water is filled full,please pull out the water pipe between panel control and tap,and seal the blast hole like this:



Seal the blast hole so there is no air into the panel control which contains water pump,filter,heater,.




After seal the blast hole,then keep these two red valves open :

Notice:Please must be careful that these two valves must be in open condition,if not,then the high water pressure will make water inside the panel control leak from the pipes inside the panel control after you start turn on the machine.cause water road is stopped by valves and cannot go through the pipe!


Then press the power on/off on the panel control here:



Then turn on the panel control by pressing the power button:

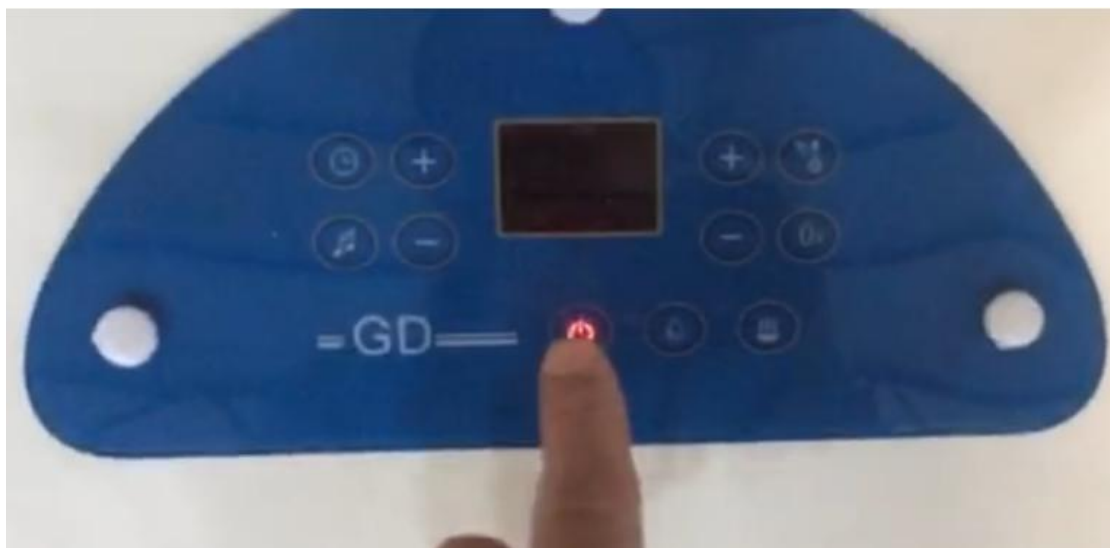

Press the following led light button to turn on the led light inside the pod like following :

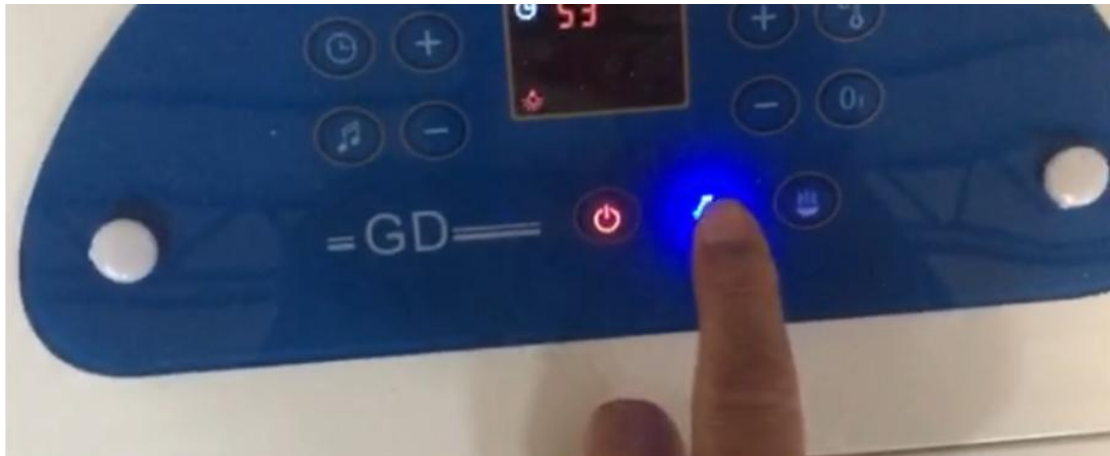

Then led light is on inside the pod light:




Press this button to set the temperature



Then press the following button "+" and "-" next to the temperature button to set the temperature at your favorite degree ,for example ,50 degree, like this way:



The highest temperature is 70 degree

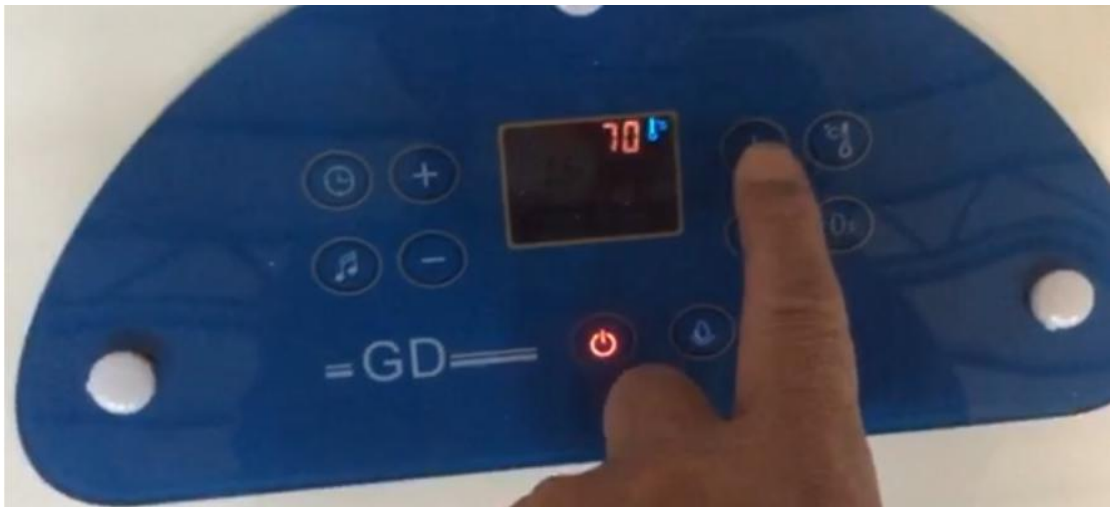

After the temperature is set ,then press the following button to set the time



Press the " + " and " - " button next to the timer button to set the time you want like this way, usually one hour



After temperature and time are set well, then press this following floating button



(heater & pump work at the same time) to heat the water and pump the water recycling at the same time which will maintain the water at the temperature you set till the time you set is over.




Once this button is pressed,UV light disinfecting water,infrared ray heater heating water,water filter filtering water, water pump making water recycling, all of them can work together at the same time.

Notice:when it is your first time to start the pump and heater after you get our tank,first check whether the needle at the inside of the panel control will turn once you press this button:



If this needle at the top of filter will turn and point at more than 0 calibration all the time, then it means there is no air inside the pump and heater any more; if the needle does not turn or clockwise rotates for a while and then comes back to the 0 calibration, it means there is still air inside the pump and heater, in this way, you have to put this handle at vertical angle to discharge air inside the pump and heater. Otherwise pump and heater will be burned.

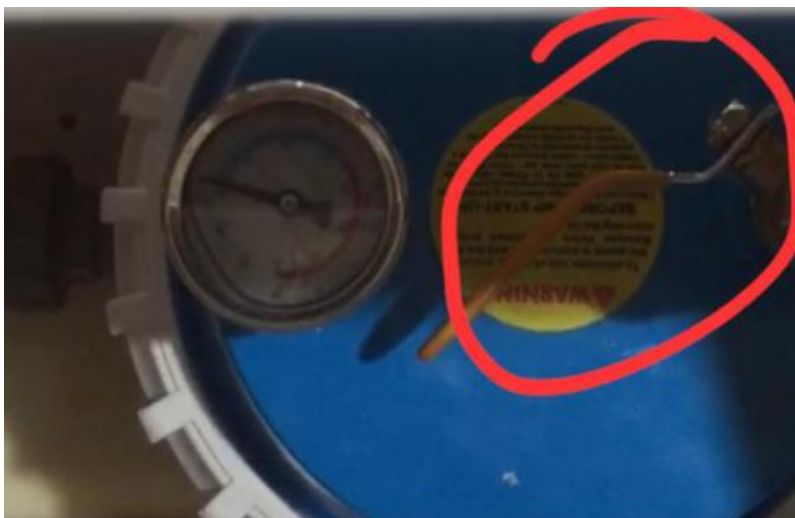

After each treatment, please press this ozone button O3 to disinfect the inside the pod:





Press the following music button ,then the bluetooth music is turned on,then you can play the favourite songs from your own cell phone and adjust the volume in your cell phone



Notice:

There are two buttons inside the pod ,one is to turn on/off the led light,the other is to turn on /off the bluetooth music:



There is also call attendance for emergency inside the pod!

Introduction of accessories:

5 micron bag filter



Notice:filter has to be replaced in half year for commercial use everyday,the same with salt water too after half year!

25V UV disinfection lamp



Ozone disinfection



Stainless steel Water drive pump




Water heater at 5000w which heats water fast




Notice:there is call emergency button inside the pod too!


We also offer starlight to our pod,but there is 200\$ more if you wanna add starlight function which makes inside more beautiful:

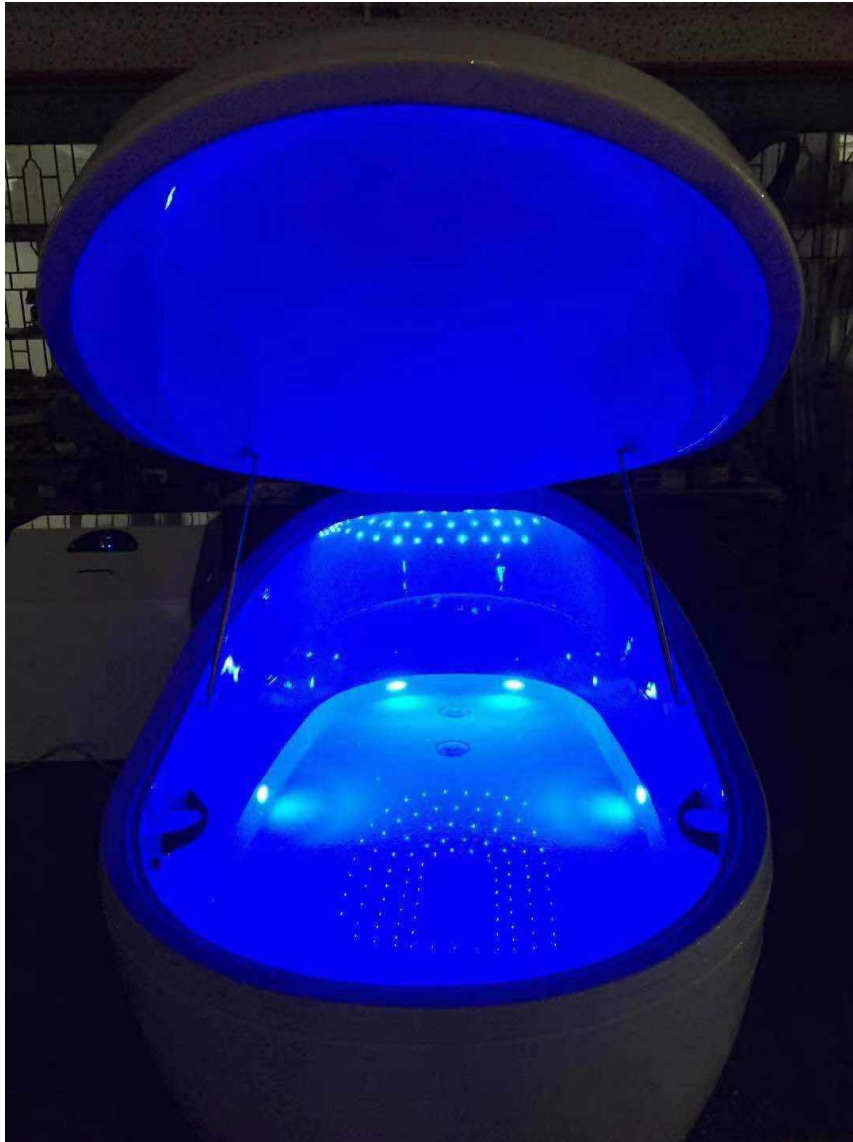

Also sofeware(touch screen instead of button screen) which costs 150\$ more:

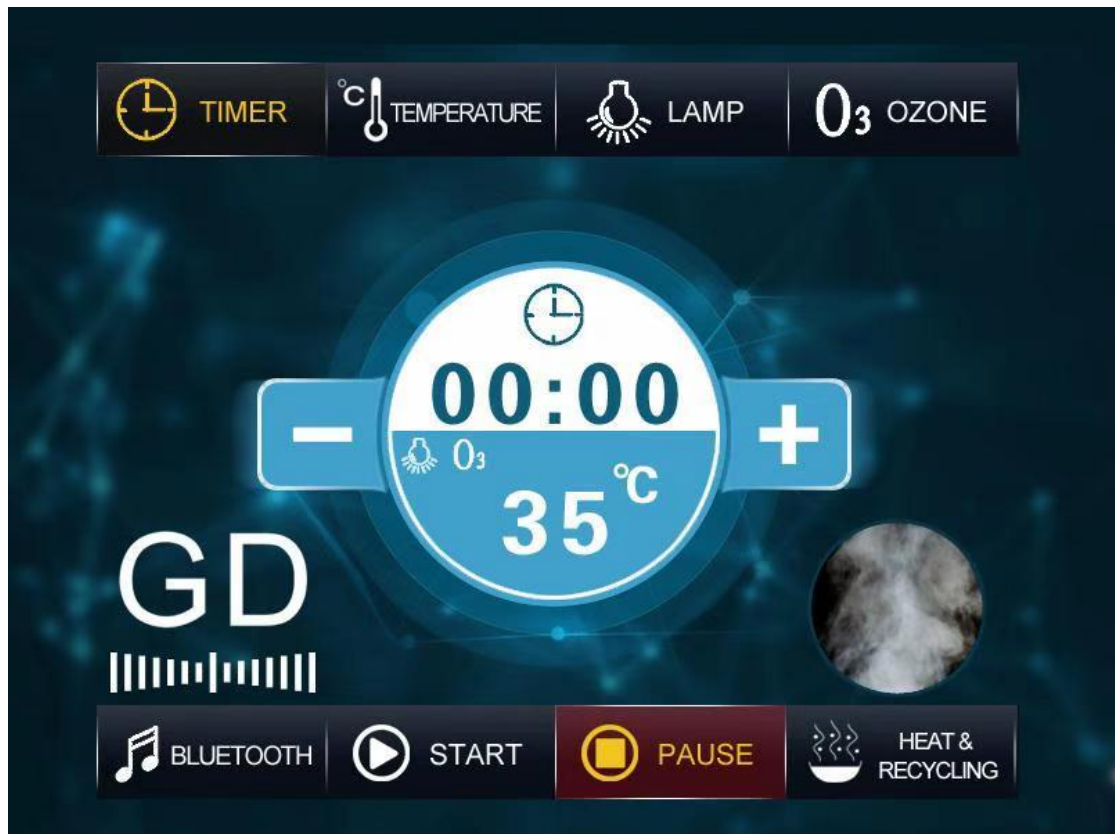

Real CE certificate:



The submitted products have been tested by us with the listed standard and found in compliance with the MDR-2017/745 (EU) and following European Standards:

Directive	Applied Standards	Test Report No.
EMC Directive	EN 60601-1-2:2015	ENC2003101GZ48E1
	EN 61000-3-2:2014	
	EN 61000-3-3:2013+A1:2019	
Safety Directive	EN 60601-1:2006+A11:2011+A1:2013+A12:2014	ENC2003101GZ48L1

This certificate is based on an evaluation of a sample of the above mentioned product. Technical report and documentation are at the licence applicant's disposal. This certificate does not imply assessment of the series-production of the product. The CE markings as shown below can be affixed on the product after preparation of necessary technical documentation.



Ray Zhou / General Manager
Date of Issue: Mar. 19, 2020

wooden package



This kind of package is the most safe and strong one in the market which guarantee the safety during the shipping.

OEM is also welcome, we can make your logo on our pods too, the following is one sample we made for two clients from two different countries:



Finally but not last: you are more than welcome to visit our factory at any time, our factory can make different pods, we are very happy and honor to work with you, your satisfaction is our goal.









At home




At the hotel



At the spa

You can choose to install floating cabins at homes or for commercial use in spas, gyms, rehabilitation centers, hotels and more.

Applicable population

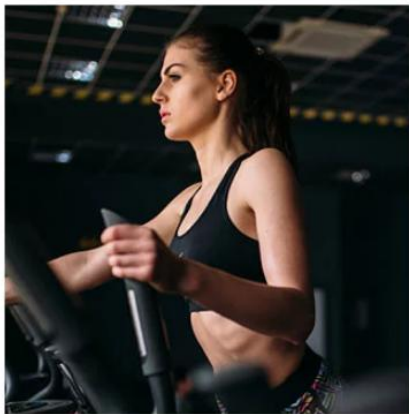

Fitness person



Office workers



pregnant woman



Insomnia

Partial details

Contact information

Name :mike (sales manager)

Whatsapp: 0086 13352825157

Cell phone: 0086 13352825157

Email :zhkcy051@126.com

**Company name:guangzhou xianli beauty
equipment Ltd**

Company website:

www.goodlooking.en.alibaba.com